

Assemble your

SPIDER-MAN

Version **IRON SPIDER**

MARVEL STUDIOS

THE
INFINITY
SAGA

02

**PREMIUM
BASE
ASSEMBLY
GUIDE**



All images of the model are of the prototype and not from the motion picture movie.



FANHOME



DeAgostini
COLLECTIBLES

MARVEL STUDIOS

© 2026 MARVEL

OUTER SECTIONS (2)

In this issue, you will assemble the second outer section of the premium base for the Spider-Man Iron Spider armor.

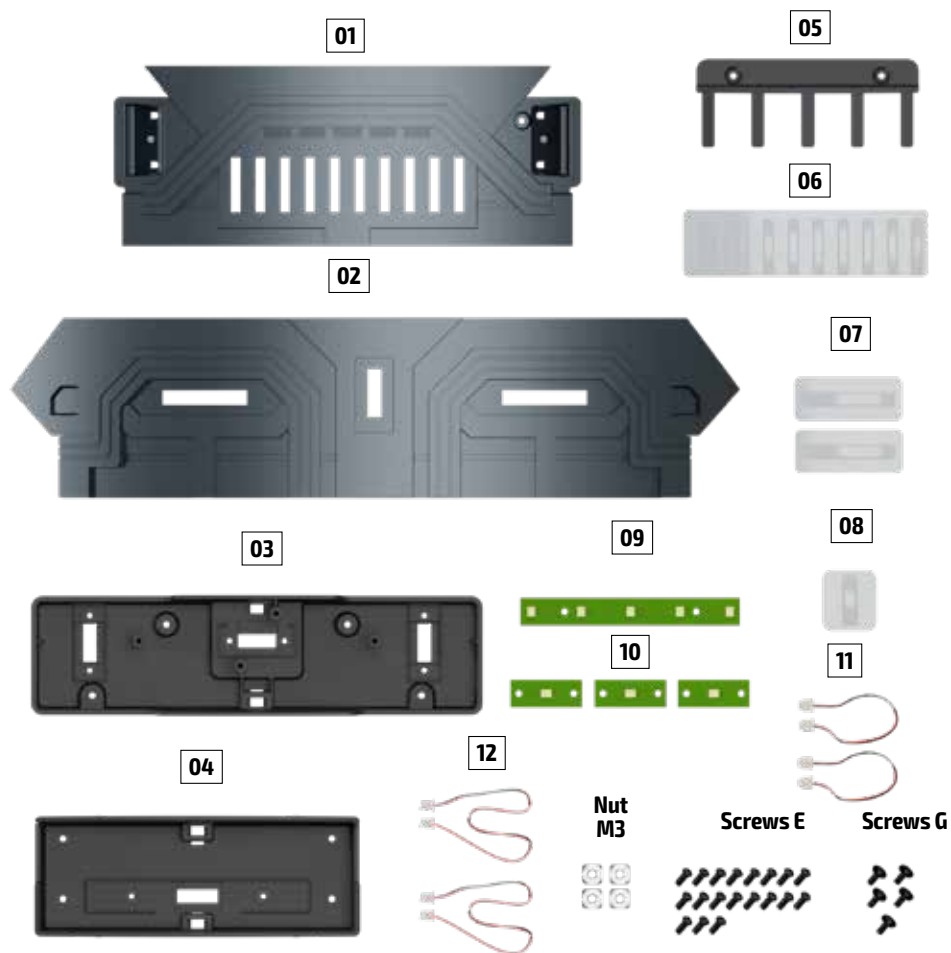


NOTE: The appearance of the parts shown here may be slightly different from the parts delivered with the issue.

Parts with this issue

01 Side panel with LED grille
02 Side panel with three LEDs
03 Internal structure (2)
04 Internal structure (1)
05 Fixture for curved LED screen
06 Curved LED screen


07 Side LED screen × 2
08 Center LED screen
09 LED strip
10 LED circuit board × 3
11 Short cable × 2
12 Long cable × 2

M3 nuts × 4
Screws E 18 + 1
Screws G 4 + 1

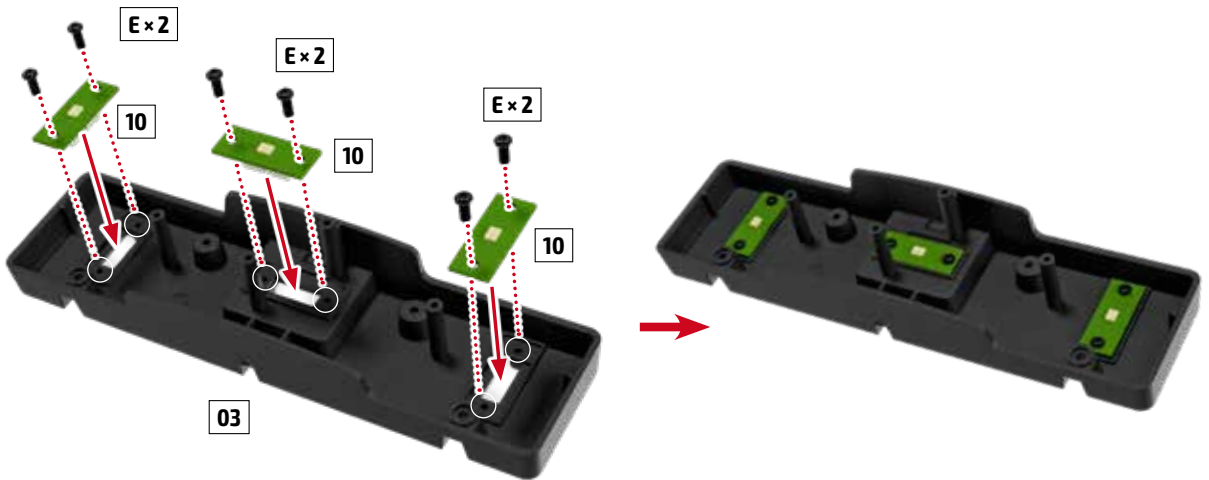


STEP 1

Inside the inner structure **03** (marked 2), position and fix the three LED circuit boards **10** with two type E screws each. Note: the white LEDs must face upward on the circuit boards.

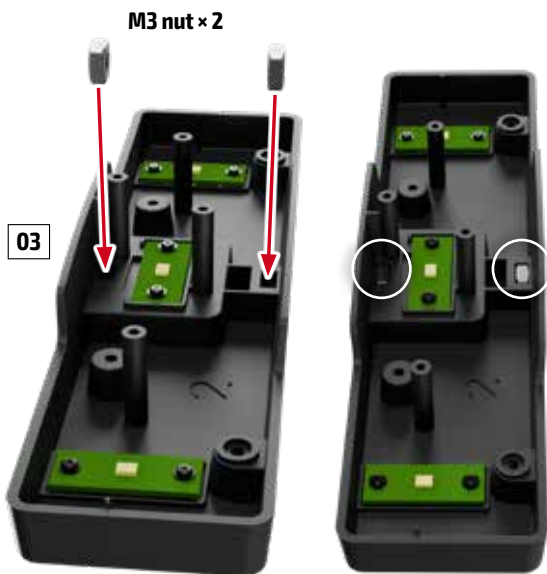

STEP 2


In the slots on either side of the center LED circuit board, insert two M3 nuts. Insert the nuts sideways and push them a little with the tip of a screwdriver so that they fit tightly. They will be visible through the side hole.

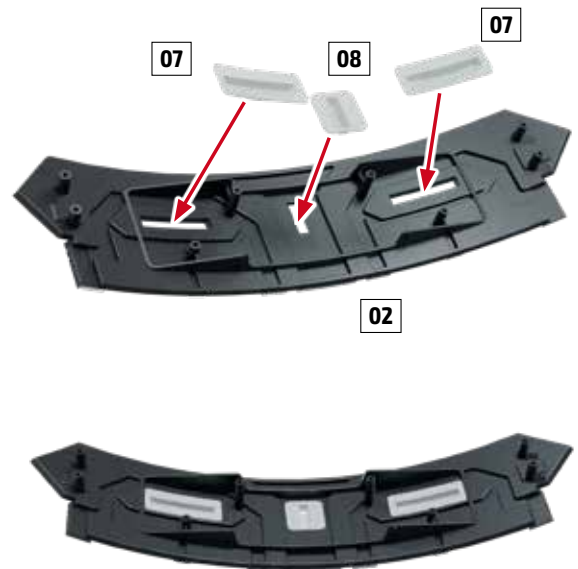

STEP 3


Inside side panel **02** (marked 1), position and push into place the center LED screen **08** and the two side LED screens **07** (they are the same), in the location shown.

PREMIUM BASE ASSEMBLY GUIDE 2

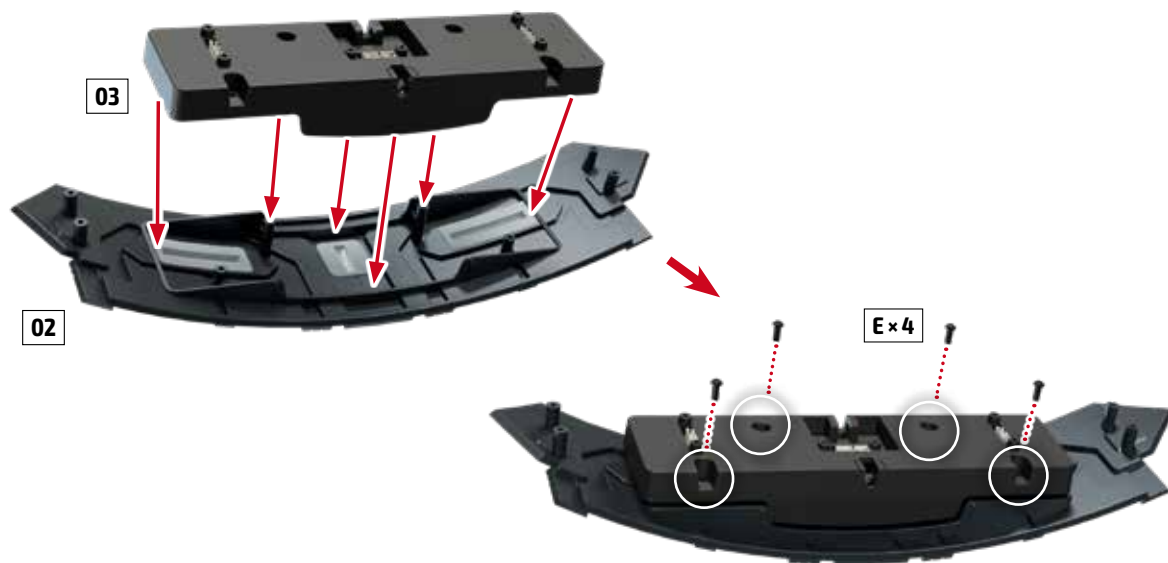


STEP 4

Being careful not to dislodge the M3 nuts or LED screens, on the inside of side panel **02** (marked 1) position and fit the internal structure **03** as shown. Fix it in position with four type E screws.

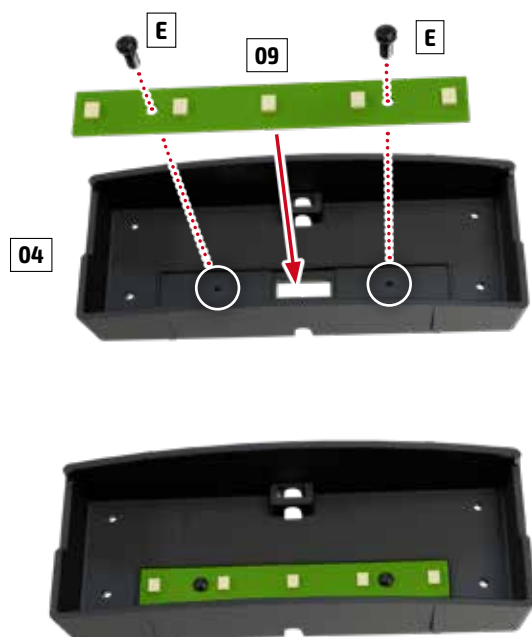


STEP 5

Inside the internal structure **04** (marked 1), position and fix the LED strip **09** with two type E screws. Note: the LEDs on the strip face upward.

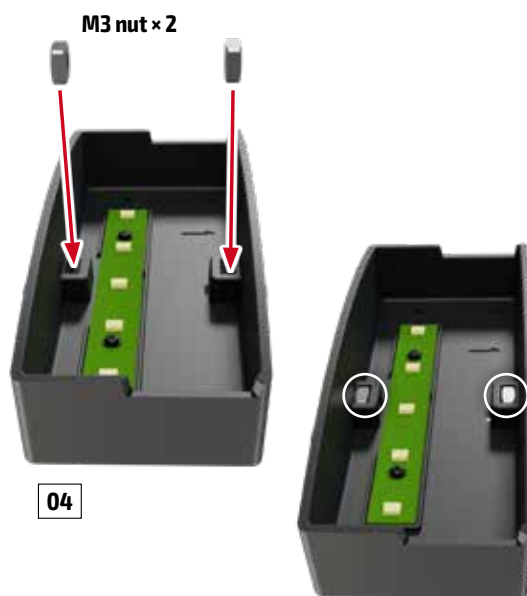


STEP 6

In the slots on either side of the LED strip, as shown by the arrows, insert two M3 nuts. Insert the nuts sideways and push them a little with the tip of a screwdriver so that they fit tightly.

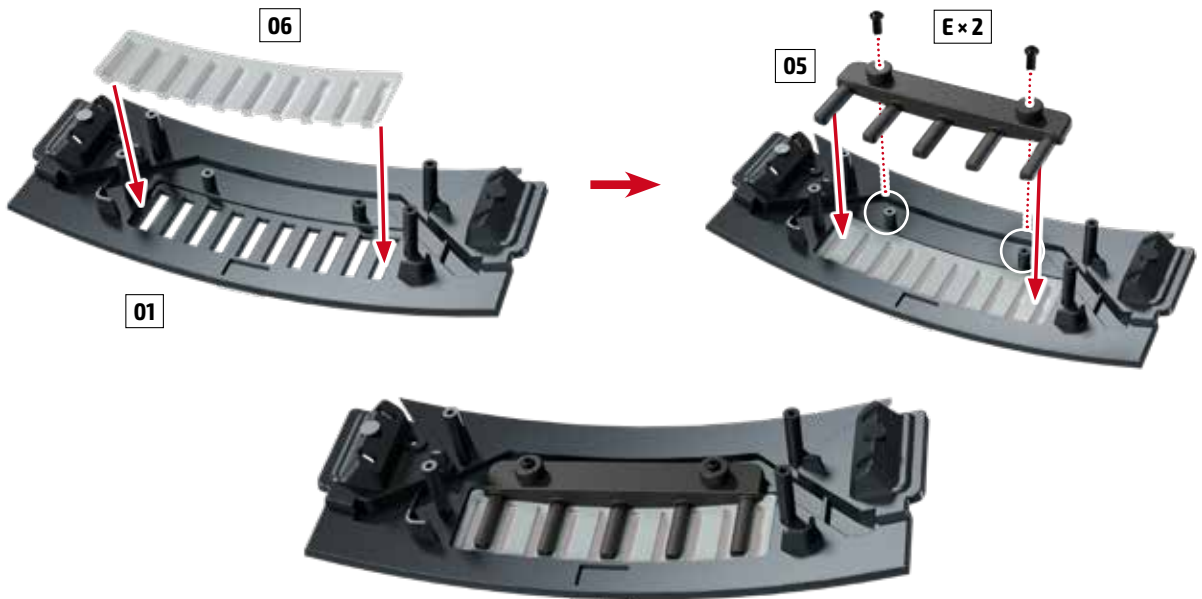

STEP 7


On the inside of the side panel with LED grille **01**, push the curved screen **06** into place, as shown. Next, over screen **06**, position the fixture for the LED screen **05** and secure it with two type E screws.

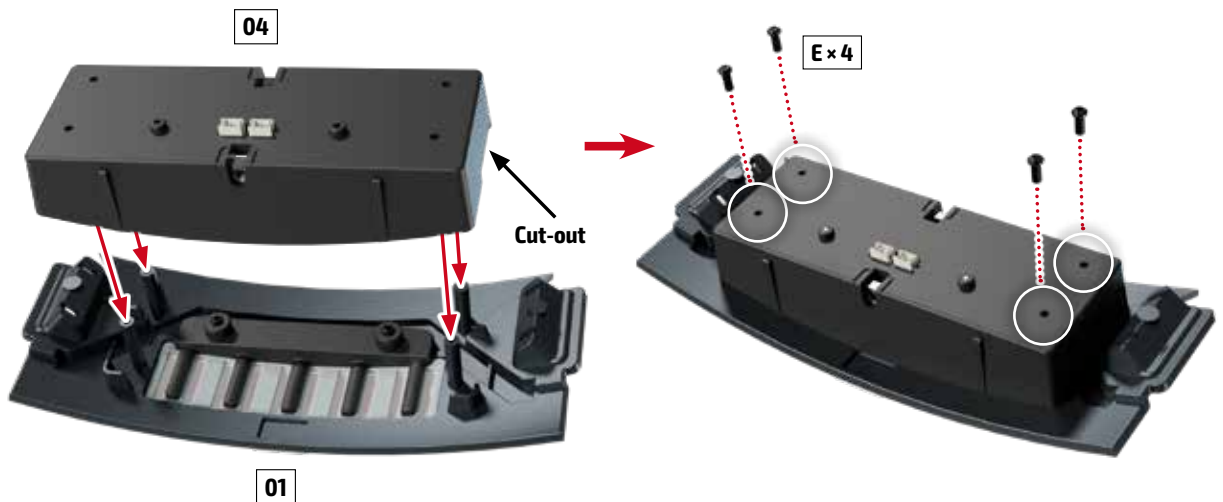

STEP 8


On the inside of the side panel **01**, working carefully so that the nuts do not fall out, position and fit internal structure **04** as shown. It will only fit correctly in one position. Secure it with four type E screws.

PREMIUM BASE ASSEMBLY GUIDE 2

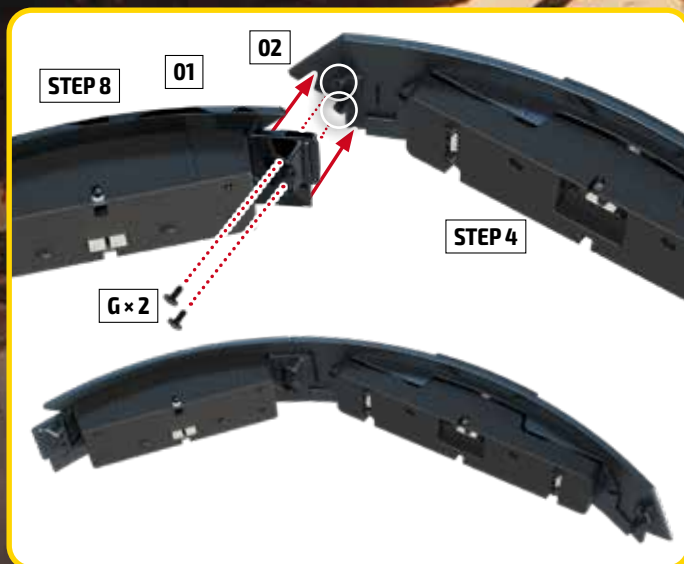


STEP 9

With the internal structures in place, position and fit the two side sections by fitting the pins of the panel 02 into the holes of 01. Fix the parts together with two type G screws.

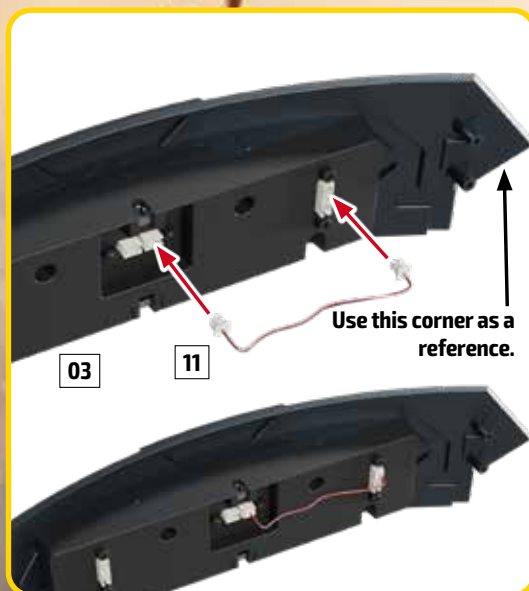


STEP 10

Plug either of the short cables 11 (they are identical) into the two connectors shown on the internal structure 03.

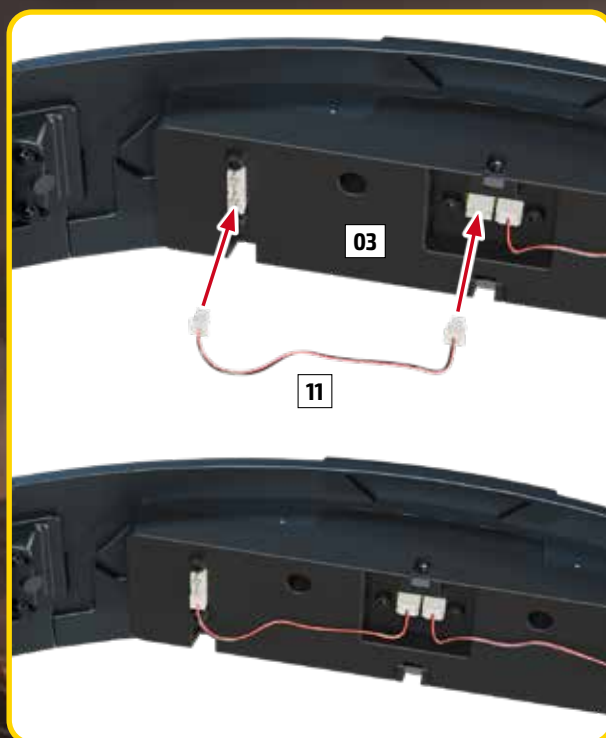


STEP 11

Then plug the other short cable 11 into the two connectors shown on the internal structure 03.

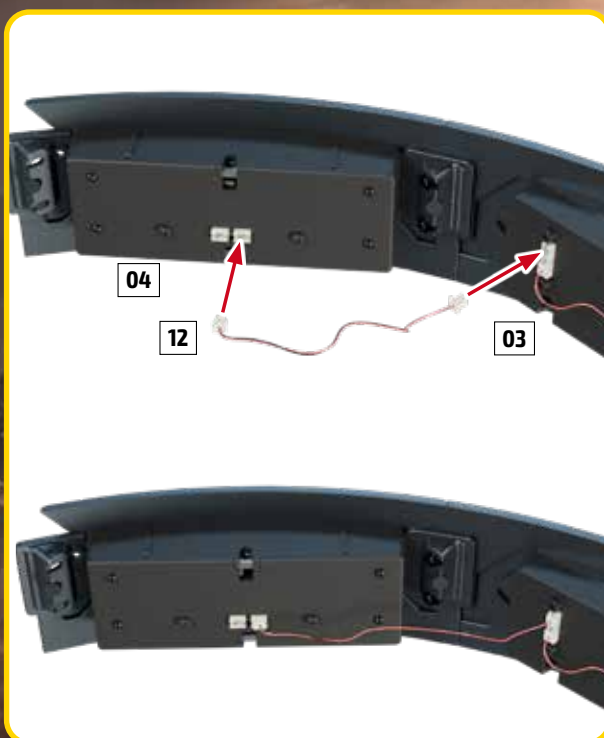

STEP 12

Plug either of the long cables 12 (they are identical) into the two connectors shown on the internal structure 03 and 04.

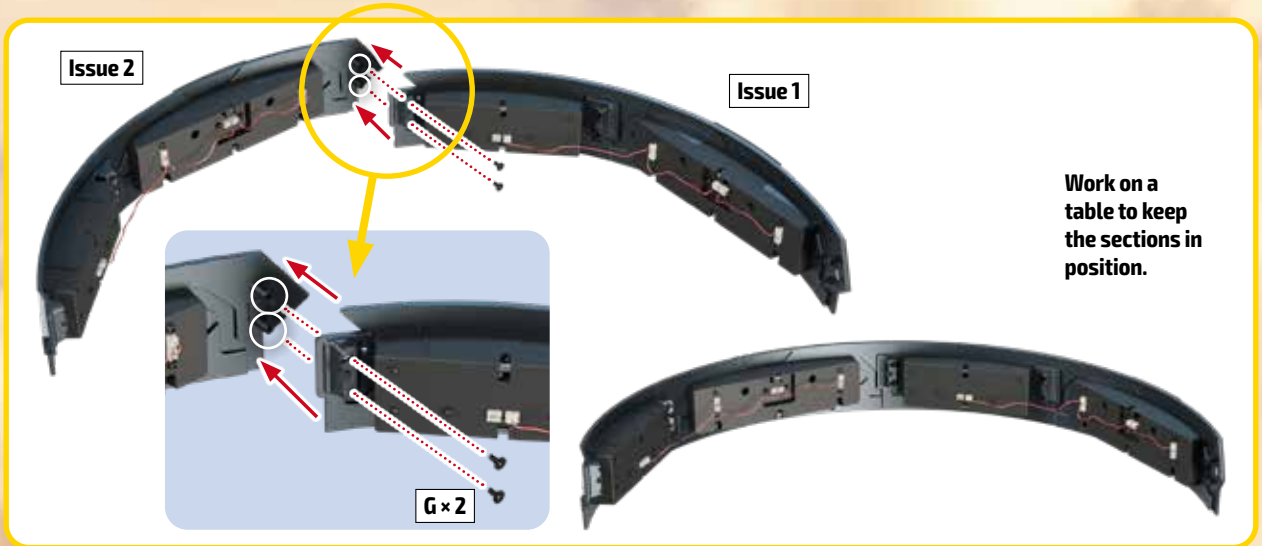


STEP 13

Join the outer sections by pushing the pins of the issue 2 assembly into the holes in the end of the issue 1 assembly, as shown. Fasten them with two type G screws.

STEP 14

Finally, plug in the other long cable **12** to finish connecting the parts together.

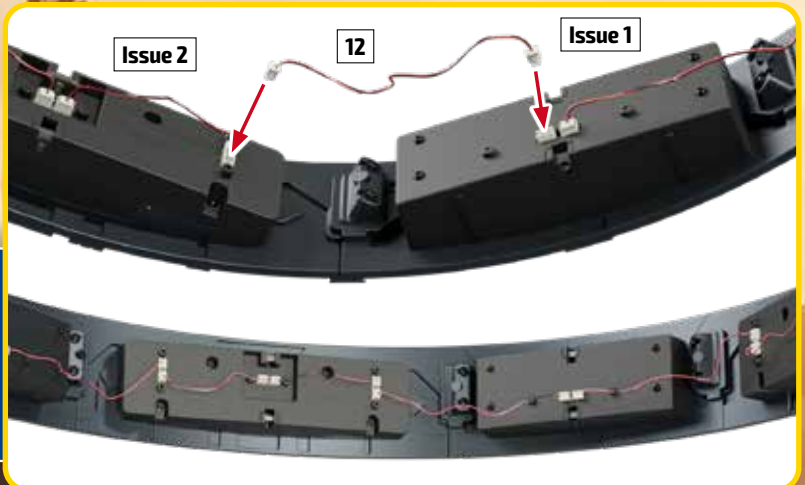

RESULT

INSIDE



OUTSIDE



The two assembled sections form half of the outer edge of the premium base.

